BLACK & WEATHERGRAIN® PANELS (CEDAR/COASTAL GRAY) — 8’ WIDTH

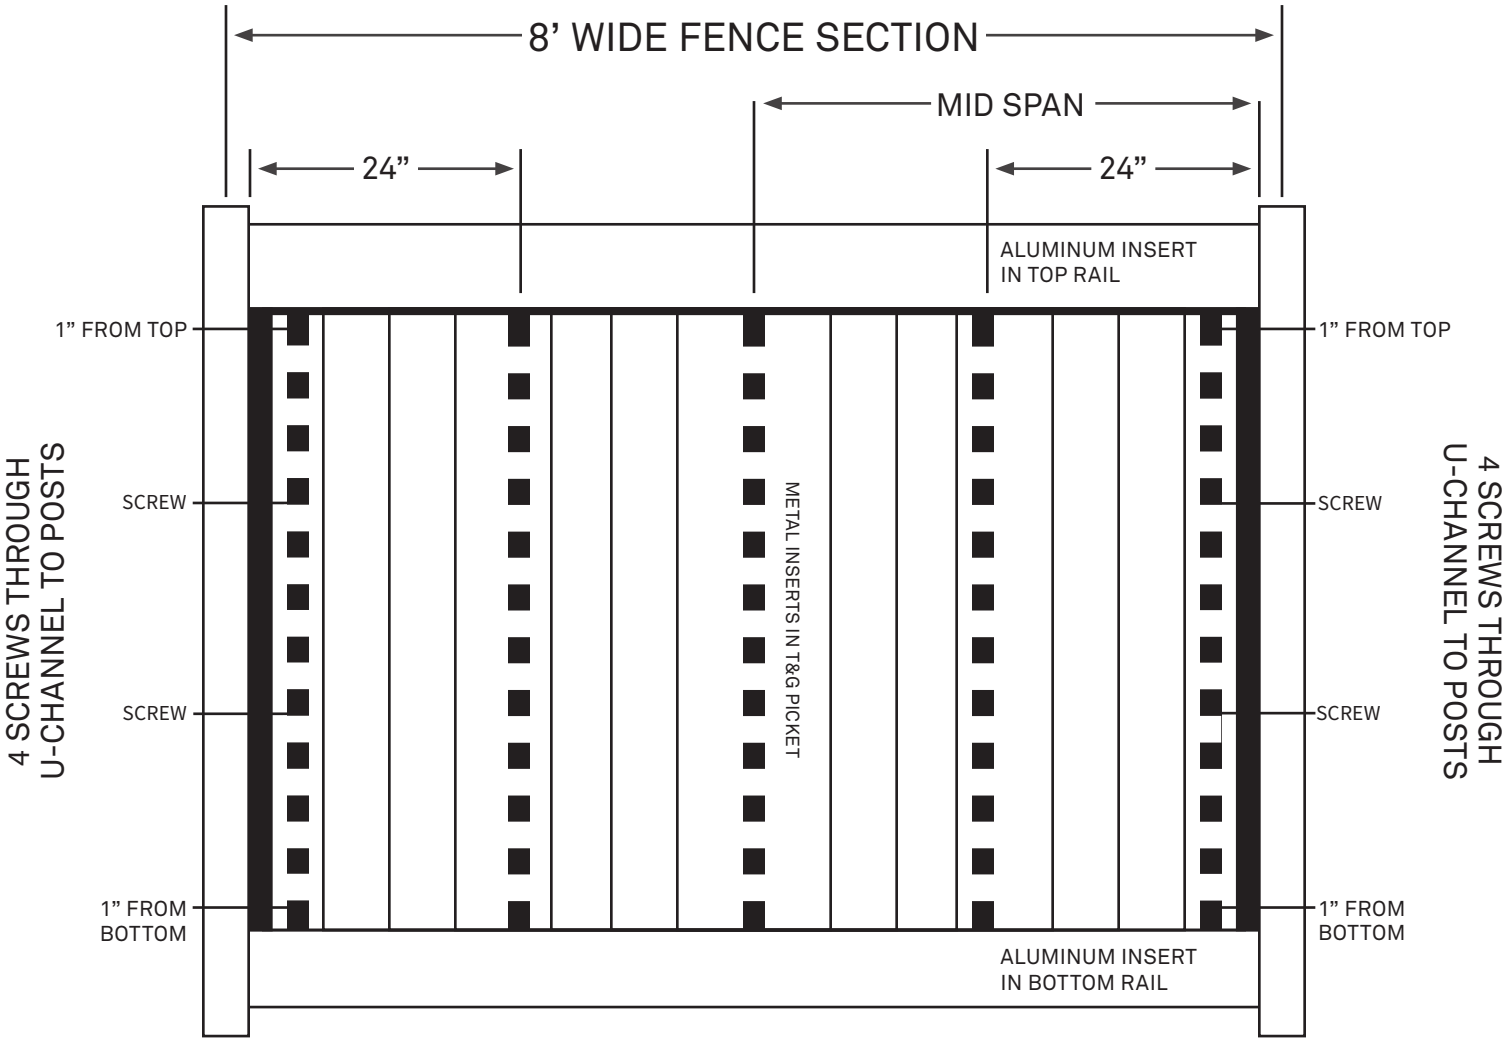

- The top and bottom rails have aluminum inserts inside them.
- Use five metal inserts (each metal insert represented by a dashed line in the diagram above) inside the tongue and groove pickets: one for each end picket, one in the middle, and two others spaced equally each between the metal insert and post. All metal inserts should be equidistant from each other.
- It is required to fix the u-channel to the fence post with the screws that are included. Screw one self-tapping screw about 1” from the top, one screw about 1” from the bottom, and two screws equidistant from the top and bottom screw. All screws should be equidistant from each other.

©2025 USA VINYL, LLC.

- **For gates:**
    - For the 38.5" and 44.5" wide gates, 3 metal inserts are required. Put 1 metal insert into each end picket (by the 4" x 4" gate socket post), and 1 metal insert in the middle picket.
    - For the 62.5" wide gate, 4 metal inserts are required. Put 1 metal insert into each end picket (by the 4" x 4" gate socket post), and then 2 metal inserts equally spaced from each other.

©2025 USA VINYL, LLC.